


1.0. GENERAL

1.1. UNLOCKING PROCEDURE & SPAN SWITCH LOCATION:

NOTE: Turn Scale On Side, Do Not Turn Scale Upside DOWN!

To Unlock:

- 1. Loosen nut & remove allen screw.**
- 2. Remove cap screw.**

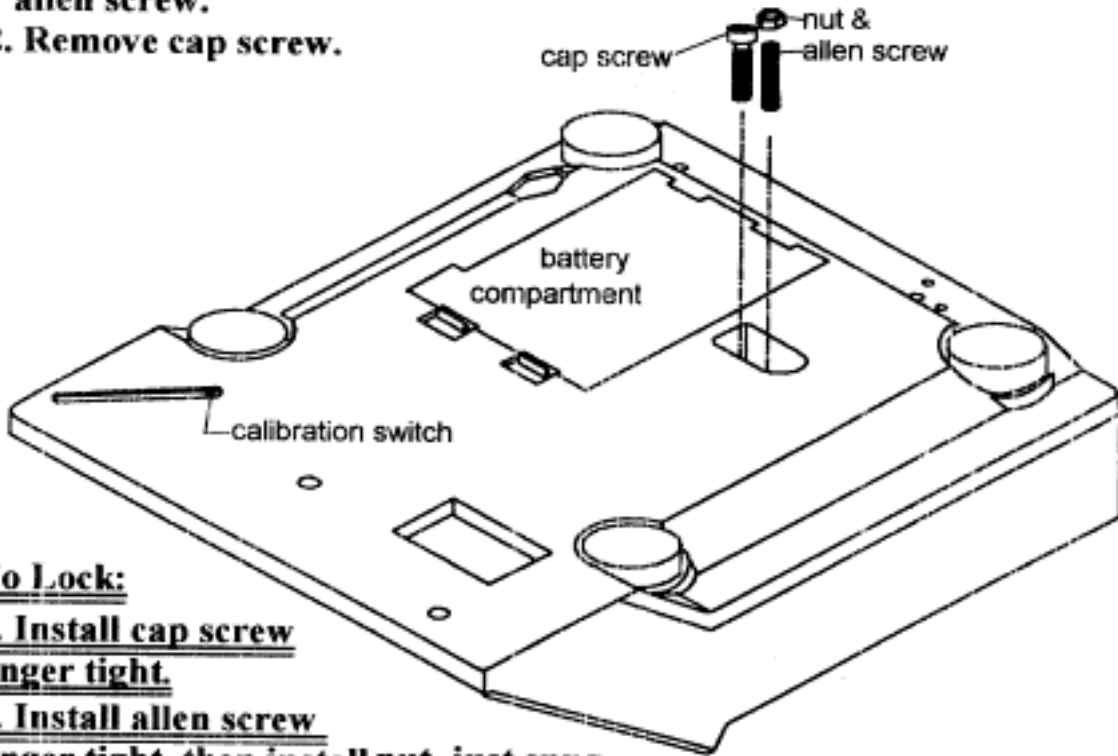

To Lock:

- 1. Install cap screw**
finger tight.
- 2. Install allen screw**
finger tight, then install nut, just snug.

NOTE: FAILURE TO LOCK SCALE PROPERLY MAY RESULT IN DAMAGE TO THE LOAD CELL.

Warning : Do Not Turn Scale Upside down!
The Drawing Above Is For Illustration Purpose Only!

